

TREX FOR SIDE CORRUGATION SPACER

2 REQUIRED 3/32" THICK TREX PLASTIC WOOD



LONG ALUMINUM STRAP

2 REQUIRED 1/8 x 1" ALUMINUM



SHORT ALUMINUM STRAP

2 REQUIRED 1/8 x 1" ALUMINUM

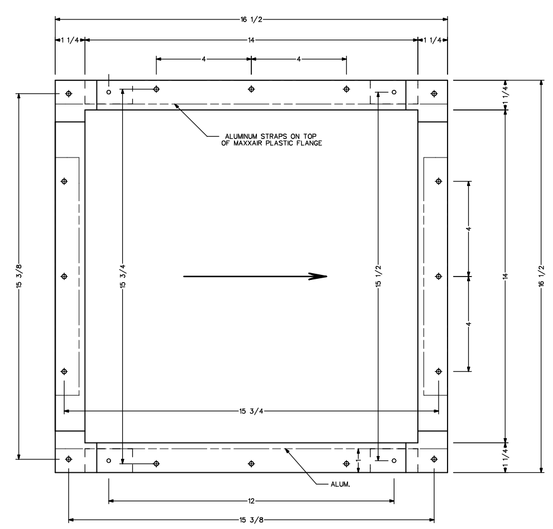

3/4" PLYWOOD FRAME

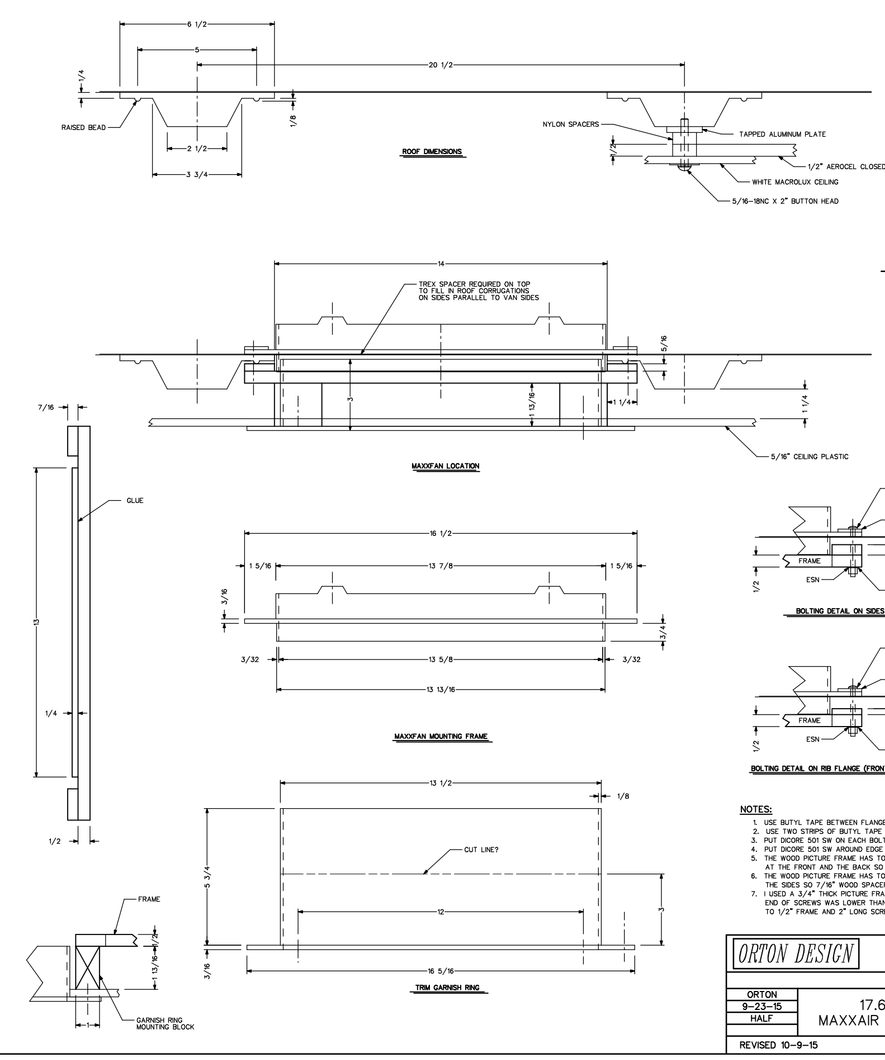

NOTES:

1. USE BUTYL TAPE BETWEEN FLANGE AND STEEL ROOF AT FRONT AND BACK
2. USE TWO STRIPS OF BUTYL TAPE ON THE SIDES, ABOVE & BELOW SPACER
3. PUT DICORE 501 SW ON EACH BOLT HEAD AND AROUND ALUMINUM STRIPS
4. PUT DICORE 501 SW AROUND EDGE OF FLANGE, THICK ON SIDES
5. THE WOOD PICTURE FRAME HAS TO SIT ON TOP OF THE RIB
   AT THE FRONT AND THE BACK SO 1/4" WOOD SPACERS ARE REQUIRED
6. THE WOOD PICTURE FRAME HAS TO SIT ON THE ROOF CORRUGATION ON
   THE SIDES SO TREX SPACERS ARE REQUIRED
7. I USED A 3/4" THICK PICTURE FRAME AND 2 1/2" SCREWS.
   END OF SCREWS WAS LOWER THAN CEILING RIB SO CHANGED DRAWING
   TO 1/2" FRAME AND 2" LONG SCREWS.

ORTON DESIGN

ORTON 9-23-15 HALF	17.64" WB TRANSIT MAXXAIR 6200K INSTALLATION
REVISED 10-9-15	ODJ127-32